

# DH5-80

## Peltier Cooling Dehumidifier

### User Manual



**Version: 1.12**

**Revision: 2026.01**

## Read me

**When you use DH5-80 Peltier Cooling Dehumidifier, be sure to read this user manual carefully, and be able to fully understand the implications, the correct guidance of operations in accordance with user manual, which will help you make better use of DH5-80 Peltier Cooling Dehumidifier and help to solve the various problems on the site.**

1. Always keep safe distance between the high voltage part and the instrument, probe and operator.
2. Measurements must not be taken when thunderstorms are nearby.
3. Do not operate the instrument or accessories in explosive atmospheres.
4. After the battery alarm of the instrument, please turn off the power to charge.
5. Do not open the instrument without permission, this will affect the warranty of the product. The factory is not responsible for self-disassembly.
6. When the instrument is transported, it should avoid rain erosion and prevent collision and falling.
7. When storing and keeping the instrument, attention should be paid to the ambient temperature and humidity, and it should be protected from dust, moisture, shock, acid, and corrosive gas.



- Please read this user manual carefully
- Please save this document

## Directory

|  |               |
|--|---------------|
| <b>1.- SUMMARIZE .....</b>                                   | <b>- 3 -</b>  |
| <b>2.- PRINCIPLE INTRODUCTION .....</b>                      | <b>- 4 -</b>  |
| <b>3.- TECHNICAL SPECIFICATION .....</b>                     | <b>- 6 -</b>  |
| <b>4.- INSTALLATION AND START-UP .....</b>                   | <b>- 7 -</b>  |
| 4.1.- WALL-MOUNTED INSTALLATION DIMENSION (UNIT: MM) .....   | - 7 -         |
| 4.2.- CONNECTION TERMINAL (SEE LABEL ON THE SIDE PART) ..... | - 8 -         |
| <b>5.- OPERATION MODE .....</b>                              | <b>- 9 -</b>  |
| 5.1.- KEY DESCRIPTION .....                                  | - 9 -         |
| 5.2.- MANUAL/ AUTO MODE SWITCH .....                         | - 9 -         |
| 5.3.- PARAMETER SETTING PROCEDURE .....                      | - 10 -        |
| 5.4.- REMOTE CONTROL (OPTIONAL) .....                        | - 11 -        |
| 5.5.- RS485 COMMUNICATION (OPTIONAL) .....                   | - 11 -        |
| <b>6.- COMMUNICATION INTERFACE .....</b>                     | <b>- 12 -</b> |
| 6.1.- MODBUS © PROTOCOL .....                                | - 12 -        |
| 6.2.- COMMAND SAMPLES .....                                  | - 13 -        |
| 6.3.- REGISTER MAP .....                                     | - 17 -        |
| <b>7.- SAFETY CONSIDERATIONS .....</b>                       | <b>- 18 -</b> |
| <b>8.- TECHNICAL SERVICE .....</b>                           | <b>- 18 -</b> |

## 1.- SUMMARIZE

The intelligent dehumidification device adopts the semiconductor refrigeration dehumidification method, actively sucks the humid air in the confined space into the dehumidification duct under the action of the fan, and the water vapor in the air is condensed into water after passing through the semiconductor refrigeration mechanism, and then discharged out of the cabinet through the water pipe Body, can achieve a good dehumidification effect.

By reducing the water content in the air, the relative humidity and absolute humidity are reduced at the same time, the temperature is hardly raised, and there will be no negative impact caused by the temperature difference, which fundamentally eliminates or reduces the occurrence of accidents, and will not accelerate the cabinet due to high temperature. Aging of internal components and cabinets. Effectively prevent safety hazards such as aging of equipment in the cabinet, reduction of insulation strength, breakdown of secondary terminals, mildew of materials and corrosion of steel structural parts, and ensure the safe operation of the power grid.

## FEATURES


- Small size, light weight, easy installation;
- Dehumidification ducts actively induce condensation, discharged gas dehumidified by heating;
- Automatic/manual dehumidification function optional, temperature and dehumidification start threshold adjustable;
- Humidity and temperature sensor 24-hour real-time sampling, beyond the set start threshold automatically induced condensation;
- Optional RS485 port, support remote control/adjustment of operating parameters and fault reporting function;
- The shell adopts aluminum alloy structure to ensure normal operation in a humid environment;
- The use of shielding isolation technology complies with the level 3 standard of GB/T17626-2008 to ensure that it can work under strong electromagnetic fields.

## APPLICATIONS

- GIS control cabinet;
- High and low voltage control cabinet;
- High and low voltage switchgear;
- Ring network cabinet, outdoor terminal box;
- Mechanical control cabinet, box type substation.

## 2.- PRINCIPLE INTRODUCTION

The intelligent dehumidification device is composed of a power supply system, an air supply system, a semiconductor refrigerator, a temperature and humidity detection control circuit, a heating circuit, a wireless module and a drainage pipeline.

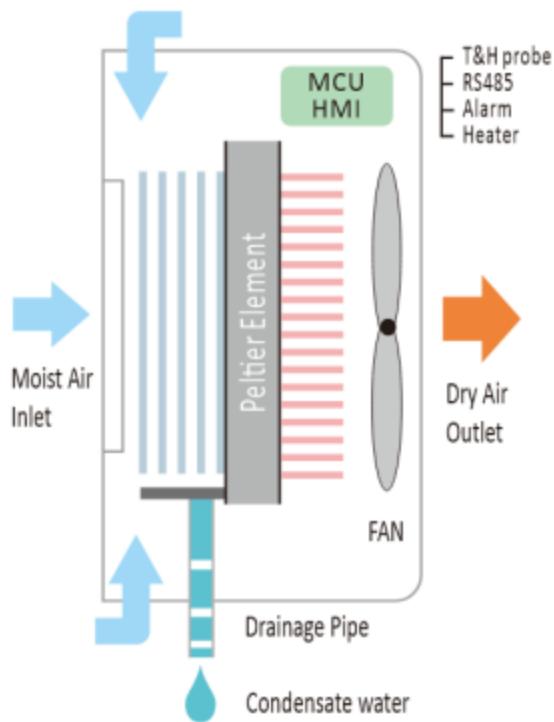

### 2.1.- Dehumidification principle

After the humid air is sucked by the fan, it flows through the specially designed air duct, and first passes through the semiconductor refrigerator to cool down and condense. After fully dehumidifying within the set starting threshold, the air humidity in the cabinet is reduced to below the dew point, and the entire moisture-proof condensation heating process is completed.

At the same time, the signal acquisition sensor of the intelligent dehumidification device is external, which can accurately collect the real humidity in the cabinet in real time, so as to ensure that the intelligent dehumidification device starts dehumidification in advance when the condensation condition is about to be reached in the cabinet.

### 2.2.- Heating function(optional)

When the temperature of the box is lower than the set start threshold, Default 5°C, the dehumidification device starts the internal heater circuit (the heater is connected externally, and the power can be connected to 100-300W), until the temperature of the box rises to the set start threshold, the heater circuit stops working.

### **2.3.- RS485 communication function(optional)**

When the dehumidification device with RS485 communication function receives the data from the host computer, it will reply the data to the host computer immediately after analyzing the data. One host computer can connect up to 200 units (the host computer recommends connecting a 120-ohm load between A and B) Resistance, adjustable communication address; remote control, adjustment of operating parameters and fault reporting function).

### **2.4.- Automatic defrosting function**

When the internal sensor detects condensation on the cold end radiator, the device will automatically start defrosting. When the ice on the cold end radiator is completely cleared, the device will automatically switch to normal working mode.

**Note:**

Alarm node: default dry node, equipment failure: default normally open.

### 3.- TECHNICAL SPECIFICATION

#### Working power

|                        |                         |
|------------------------|-------------------------|
| Power supply           | 85V~265VAC/DC 50Hz      |
| Peltier rated power    | 75W                     |
| Air volume flow        | 100m <sup>3</sup> /h    |
| Dehumidifying capacity | 350ml/Day, @35°C, 90%RH |

#### Measurement and ability


|                            |                            |
|----------------------------|----------------------------|
| Humidity monitor range     | 20%RH~98%RH                |
| Sensor accuracy            | ±5%RH                      |
| Dehumidify start threshold | 45%RH~98%RH, Default 65%RH |
| Environment temperature    | 5~60°C                     |
| Temperature monitor range  | -40~80°C                   |
| Sensor accuracy            | ±1.0°C                     |
| Heater start threshold     | 1~55°C, Default 5°C        |
| Heater power               | 50~500W optional           |

#### Other

|                    |                                      |
|--------------------|--------------------------------------|
| Physical dimension | 138*150*70mm                         |
| Aqueduct           | Silicone D10mm, length 2/3m optional |
| Material           | Aluminum alloy                       |
| Screen             | 1 digital LED                        |
| Standards          | IEC60255-22-1                        |
| Communication      | RS485, Modbus-RTU (Optional)         |

## 4.- INSTALLATION AND START-UP


### 4.1.- Wall-mounted installation dimension (unit: mm)

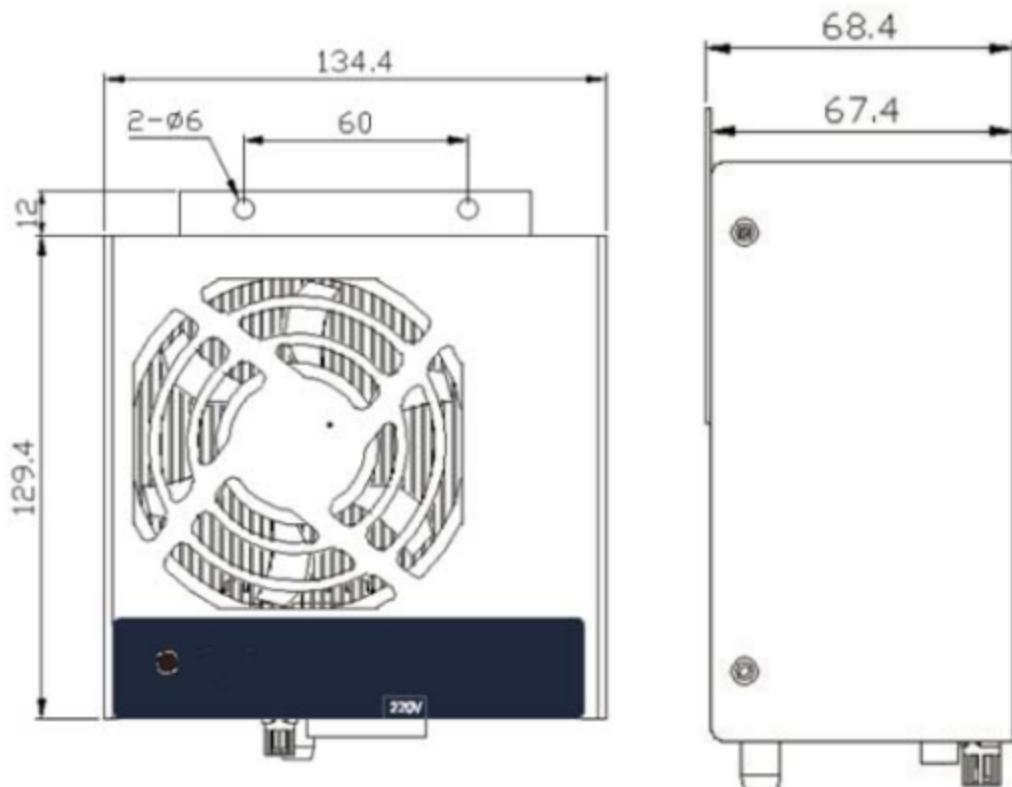


#### Notes:

1. Fix with M5 screws or 5mm rivets. When installing, the dehumidifier must be placed vertically with the water outlet facing down.
2. Ensure that there is more than 5cm of space between the front of the dehumidifier and other devices to ensure the air from the front fan outlet.
3. One end of the outlet pipe is connected to the drain of the dehumidification device, fixed with a clamp to keep the water pipe smooth and not entangled, and the other end leads to the outside of the box.
4. Connect the power terminal L/N to AC220V power supply.

#### 4.2.- Connection terminal (see label on the side part)

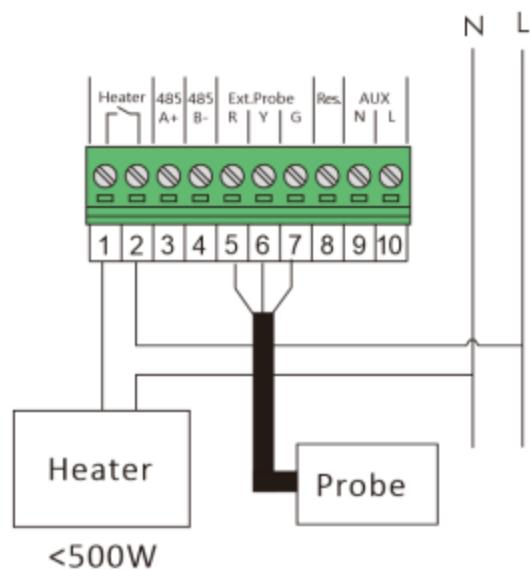

**Default passive dry node, heater need additional power supply.**

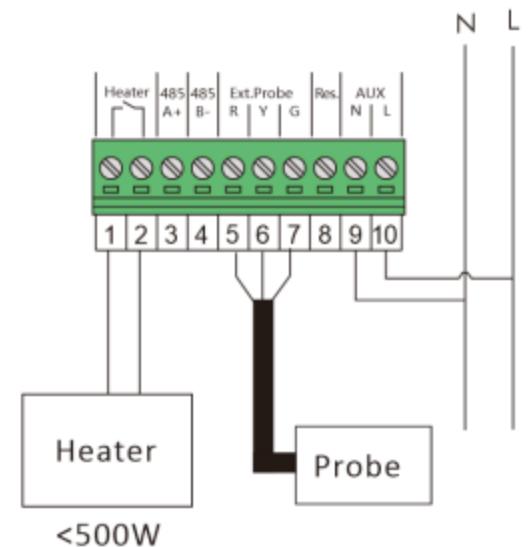


**Optional active wet node version, heater can be powered by the dehumidifier.**

| No. | Notes                                      |
|-----|--|
| 1   | External heater, normally open             |
| 2   | Communication interface                    |
| 3   | Temperature and humidity sensor connection |
| 4   | Reserved                                   |
| 5-7 | Power supply                               |

## 5.- OPERATION MODE

### 5.1.- Key description

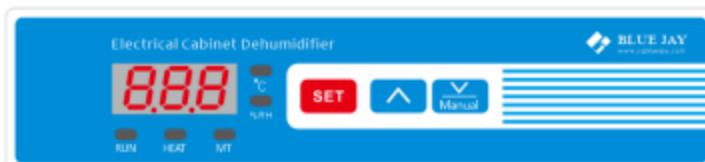

| Key  | In Working state                | In Setting state                                     |
|--|---------------------------------|--|
|         | /                               | Select parameters and set the values.                |
|  Manual | Switch between Auto/Manual mode | Select parameters and set the values.                |
|        | Enter the parameter setting     | Save the modified value and exit the setting screen. |

### 5.2.- Manual/ Auto mode switch

The device default in the Automatic state and the "Auto" indicator light is on. After pressing the "



" key, the "Auto" indicator light is off, and the "Manual" indicator light is on. At this time, the dehumidifier module starts work.



Pressing the "  " key again, the dehumidifier automatically turns to Auto mode.



Press multiple times the "  " key to cycle through the Auto/Manual mode.

### 5.3.- Parameter setting procedure

After the power is turned on, the device enters the self-test program, and enters the Auto mode. the screen displays the current temperature and humidity values.

|                                  |                                 |                        |                  |                         |                  |                  |
|----------------------------------|---------------------------------|------------------------|------------------|-------------------------|------------------|------------------|
| <b>P1</b><br>075                 | <b>P2</b><br>065                | <b>P3</b><br>005       | <b>P4</b><br>005 | <b>P5</b><br>-01        | <b>P6</b><br>000 | <b>P7</b><br>001 |
| Dehumidification start threshold | Dehumidification stop threshold | Heater start threshold | Temperature HYS  | Defrost start threshold | Working mode     | Modbus address   |

Press the "  " to can set the P1-P7 parameter values (Dehumidification start threshold, Dehumidification stop threshold, Heater start threshold, Temperature HYS, Defrost start threshold ,Working mode ,Modbus address)

Press the "  " the lower row numbers will flash, Then press the "  " or "  " or "  " to select and modify the P1-P7 parameter value;

After the modification completed, press the "  " to save, the number stops flashing.

#### Notes:

1. Cooling stop temperature threshold: used to force the device to stop working under a specific temperature environment. Refrigeration stop threshold is based on 10, that is, 10 represents 0 degrees, stop cooling, 11 means +1 degrees, and 9 means -1 degrees.
2. For the correction value of the temperature measurement of the cooling chip, when the temperature and humidity are displayed on the normal startup screen, press the"  " or "  " synchronously to enter the setting flashing screen. The setting method is the same as above.

#### 5.4.- Remote control (optional)

When the dehumidification device receives wireless data from the main control room, the communication indicator light will flash.

#### 5.5.- RS485 communication (optional)

When the dehumidification device receives data from the host inquiry, the communication indicator light will flash. Please refer to [Chapter 6](#) for details.

## 6.- COMMUNICATION INTERFACE

This device adopts RS-485/MODBUS RTU communication protocol, baud rate 9600bps, 1 start bit, 8 data bits, no parity, 1 stop bit, that is, 1 byte of data in total 10 bits. The default setting address of the device is 01 when it leaves the factory, and the user can reset it according to the site conditions.

### 6.1.- MODBUS © protocol

**Modbus RTU Frame Format:**

|                         |               |  |
|-------------------------|---------------|--|
| <b>Address code</b>     | <b>1 BYTE</b> | Slave device address <b>1-247</b>  |
| <b>Function code</b>    | <b>1 BYTE</b> | <i>Indicates the function codes like read coils / inputs</i>   |
| <b>Data code</b>        | <b>4 BYTE</b> | <i>Starting address, high byte</i><br><i>Starting address, low byte</i><br><i>Number of registers, high byte</i><br><i>Number of registers, low byte</i> |
| <b>Error Check code</b> | <b>2 BYTE</b> | <i>Cyclical Redundancy Check ( CRC )</i>   |

### MODBUS FUNCTIONS

| <b>Code</b>        | <b>Meaning</b>                  | <b>Description</b>               |
|--------------------|---------------------------------|----------------------------------|
| <b>FUNCTION 03</b> | <b>Read holding register</b>    | <i>Read setting parameters</i>   |
| <b>FUNCTION 04</b> | <b>Read input registers</b>     | <i>Read setting parameters</i>   |
| <b>FUNCTION 10</b> | <b>Write multiple registers</b> | <i>Set the device parameters</i> |

## 6.2.- Command samples

### 6.2.1.- Query the temperature and humidity value, Read only, “03H” code to read

#### Host inquiry

|                      |     |
|----------------------|-----|
| Address              | 01H |
| Function code        | 03H |
| Starting register _H | 00H |
| Starting register _L | 07H |
| Inquiry length _H    | 00H |
| Inquiry length _L    | 03H |
| CRC _L               | XXH |
| CRC _H               | XXH |

#### Slave response

|  |     |
|--|-----|
| Address                                  | 01H |
| Function code                            | 03H |
| Data length                              | 06H |
| Temperature _H                           | ... |
| Temperature _L                           | ... |
| Humidity _H                              | ... |
| Humidity _L                              | ... |
| Refrigeration chip _H                    | ... |
| Refrigeration chip temperature value - L | ... |
| CRC _L                                   | XXH |
| CRC _H                                   | XXH |

#### Example: Host inquiry

01 03 00 07 00 03 B4 0A

#### Slave response

01 03 06 00 FA 02 58 00 00 BA 07

#### Note:

When the temperature is negative, and the highest position of the 16-bit temperature value is 1, Use regular complement method.

For example: -10°C is expressed as 1111 1111 1111 0110

**6.2.2.- Query setting parameters, Read only, “04H” code to read**
**Host inquiry**

|                     |     |
|---------------------|-----|
| Address             | 01H |
| Function code       | 04H |
| Starting register_H | 00H |
| Starting register_L | 00H |
| Inquiry length_H    | 00H |
| Inquiry length_L    | 07H |
| CRC_L               | XXH |
| CRC_H               | XXH |

**Slave response**

|                                |     |
|--------------------------------|-----|
| Address                        | 01H |
| Function code                  | 04H |
| Data length                    | 0EH |
| Working status                 | ... |
| Working mode                   | ... |
| Humidity start threshold_H     | ... |
| Humidity start threshold_L     | ... |
| Humidity stop threshold_H      | ... |
| Humidity stop threshold_L      | ... |
| Temperature start threshold_H  | ... |
| Temperature start threshold_L  | ... |
| Temperature HYS. threshold_H   | ... |
| Temperature HYS. threshold_L   | ... |
| Condenser deicing threshold_H  | ... |
| Condenser deicing threshold_L  | ... |
| Device communication address_H | ... |
| Device communication address_L | ... |
| CRC_L                          | XXH |
| CRC_H                          | XXH |

**Example: Host inquiry**

01 04 00 00 00 07 B1 C8

**Slave response**

01 04 0E 00 00 00 4B 00 41 00 05 00 05 00 00 00 01 B9 51

Heating relay output status (01 means closed, 00 means normally open)

**6.2.3.- Change device parameters, Write only, “10H” code to write****Host inquiry**

|                             |        |
|-----------------------------|--------|
| Address                     | 01H    |
| Function code               | 10H    |
| Starting register           | 00H    |
| Register NO.                | 01H    |
| Inquiry length              | 00H    |
| Humidity start threshold    | 0X004B |
| Humidity stop threshold     | 0X0041 |
| Temperature start threshold | 0X0005 |
| Temperature HYS. threshold  | 0X0005 |
| Condenser stop threshold    | 0x0001 |
| Device address              | 0x0001 |
| CRC_L                       | XXH    |
| CRC_H                       | XXH    |

**Example: Host inquiry**

01 10 00 01 00 06 0C 00 4B 00 41 00 05 00 05 00 01 00 01 8E F1

**Slave response**

01 10 00 01 00 06 11 CB

**Means that:**

Humidity start threshold is set to: 75%RH

Humidity stop threshold is set to: 65%RH

Temperature start threshold is set to: 5°C

**6.2.4.- Set manual dehumidification/auto dehumidification, Write only, “10H” code to write****Host inquiry**

|                            |        |
|----------------------------|--------|
| Address                    | 01H    |
| Function code              | 10H    |
| Starting register          | 00H    |
|                            | 01H    |
| Register NO.               | 00H    |
| Inquiry length             | 02H    |
| Manual switch command byte | 0Xaa55 |
| CRC_L                      | XXH    |
| CRC_H                      | XXH    |

**Example: Host inquiry**

01 10 00 07 00 01 02 AA 55 19 78

**Slave response**

01 10 00 07 00 01 B0 08

**Means that:**

Manual/ automatic dehumidification switch command

### 6.3.- Register map

#### 6.3.1.- Query/set measurement parameters and working status, read/ write, function x10H

| Register | Item                             | Byte | Description   |
|----------|----------------------------------|------|---|
| 0000     | Working mode/display mode        | 2    | <p><b>The lower 8 bits indicate the working mode:</b></p> <p>0 = Heating working mode;<br/>1 = Cooling working mode.</p> <p><b>The upper 8 bits indicate the working status:</b></p> <p>.0 = Automatic status;<br/>.1 = Manual status;<br/>.2 = Setting status;<br/>.3 = Running status;<br/>.4 = Dehumidifier working status;<br/>.5 = Heater working status;<br/>.6 = Fan working status;<br/>.7 = Deicing working status</p> <p>Default: 0,0</p> |
| 0001     | Dehumidification start threshold | 2    | Range: 0 ~ +99.0%RH, default: 75%   |
| 0002     | Dehumidification stop threshold  | 2    | Range: 0 ~ +99.0%RH, default: 65%   |
| 0003     | Temperature start threshold      | 2    | Range: 0.0°C ~ 99.9°C, default: 5.0°C   |
| 0004     | Temperature HYS. threshold       | 2    | Range: 0°C ~ 20°C, default: 0.0°C   |
| 0005     | Condenser deicing threshold      | 2    | Range: -9°C ~ +9°C, default: 0.0°C  |
| 0006     | Device communication address     | 2    | Range: 1~247, default: 1  |

#### 6.3.2.- Parameter query, read-only, function x03/04H

| Register | Item                                 | Byte | Description            |
|----------|--------------------------------------|------|------------------------|
| 0007     | Ambient temperature value            | 2    | Range: 0°C ~+99.9°C    |
| 0008     | Ambient humidity value               | 2    | Range: 0 ~ +99.0% RH   |
| 0009     | Refrigeration chip temperature value | 2    | Range: -50°C ~ +99.9°C |

#### Note:

The data in register 0000 ~ 0008 involve decimal points, so the data must be multiplied by 10 or divided by 10 to get the actual data of the decimal point.

## 7.- SAFETY CONSIDERATIONS



All installation specification described at the previous chapters named:  
**INSTALLATION AND STARTUP, INSTALLATION MODES and  
SPECIFICATIONS.**

Please note that with the instrument powered on, the terminals could be dangerous to touching and cover opening actions or elements removal may allow accessing dangerous parts. This instrument is factory-shipped at proper operation condition.

- ◆ The device must have a professional installation and maintenance.
- ◆ Any operation of the device, you must cut off the input signal and power.

## 8.- TECHNICAL SERVICE

For any inquiry about the instrument performance or whether any failure happens, contact to Blue Jay's technical service.

*Blue Jay - After-sales service*

*1802, Building 2, No.88, Jianxin East Road,  
Chongqing, 400020, China*

*Tel - + 0086 023 67628702  
E-mail: [tech@cqbluejay.com](mailto:tech@cqbluejay.com)*