


# JY1000-AL DC Insulation Monitor

## User Manual

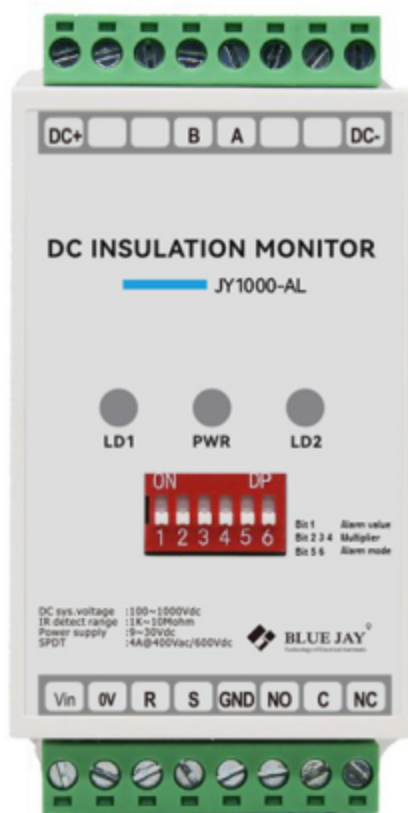

**Version: 1.11**

**Revision: 2025.09**

## Read me

**When you use JY1000-AL, be sure to read this user manual carefully, and be able to fully understand the implications, the correct guidance of operations in accordance with user manual, which will help you make better use of JY1000-AL, and help to solve the various problems at the scene.**

1. Before turning on the power supply, be sure that the power supply within the provisions of the instrument;
2. When installation, the current input terminal must non-open, voltage input terminals must Non-short circuit;
3. Communication terminal (RS485) is strictly prohibited to impose on high pressure;
4. Be sure the instrument wiring consistent with the internal system settings;
5. When communicating with the PC, instrument communication parameters must be consistent with the PC.



- **Please read this user manual carefully**
- **Please save this document**

## Directory


<b>1.- SUMMARIZE .....</b>	<b>- 1 -</b>
<b>2.- TECHNICAL PARAMETERS .....</b>	<b>- 3 -</b>
<b>3.- FUNCTION INTRODUCTION .....</b>	<b>- 5 -</b>
3.1.- WORKING MODE INTRODUCTION .....	- 5 -
3.2.- READING INSULATION RESISTANCE .....	- 6 -
3.3.- INSULATION RESISTANCE ALARM AND RESET FUNCTION .....	- 7 -
3.4.- BUZZER FUNCTION DESCRIPTION (OPTIONAL) .....	- 8 -
<b>4.- INSTALLATION AND STAR UP .....</b>	<b>- 9 -</b>
4.1.- MOUNTING .....	- 9 -
4.2.- WIRING METHOD .....	- 10 -
4.3.- THE LED INDICATOR INTRODUCTION .....	- 11 -
<b>5.- COMMUNICATION INTERFACE .....</b>	<b>- 12 -</b>
5.1.- CONNECTION FOR RS485 AND COMMUNICATION PROTOCOL .....	- 12 -
5.2.- REGISTER MAP .....	- 13 -
5.3.- COMMAND EXAMPLES .....	- 15 -
<b>6.- SAFETY CONSIDERATIONS .....</b>	<b>- 16 -</b>
<b>7.- MAINTENANCE .....</b>	<b>- 16 -</b>

## 1.- SUMMARIZE

JY1000-AL is a DC to Ground insulation monitoring module based on the principle of unbalanced bridge, which has monitoring and protection functions in one. It can monitor the insulation resistance value of the positive and negative poles of the DC floating system to the ground, ranging from  $1\text{K}\Omega$ ~ $10\text{M}\Omega$ ; at the same time, it can also detect the DC voltage value, ranging from 100V to 1000V.

The user can obtain the measurement value through RS485 communication, and can set the alarm resistance threshold through the DIP switch or RS485 communication. When the insulation resistance is less than this value, the fault relay operates and the L2 indicator light is on. At the same time, passive reset and automatic reset can also be selected through the configuration bit of the DIP switch, and the module stops working at the same time as manual or remote reset.

JY1000-AL is equipped with a high-voltage grounding switch (switch K in the picture), which can realize the online on-off function, that is, when the module is powered off, reset, and stops working, its high-voltage switch to the ground is disconnected, and it is completely separated from the ground. The DC to ground high voltage test is not higher than 4200Vdc.

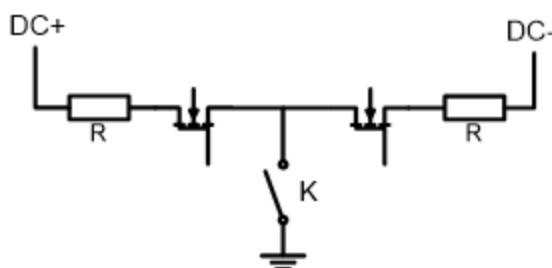

## FEATURES

- High voltage grounding switch;
- Widely power supply range;
- Widely insulation monitoring range (100V~1000VDC);
- insulation monitoring equipment self-test;
- Adaptive capacitance to ground;
- Convenient parameter setting;
- Remote monitoring and management;
- Monitor positive and negative poles;
- Ground insulation resistance;
- Voltage reverse polarity alarm;

**APPLICATIONS**

- Insulation resistance monitoring;
- DC voltage monitoring;
- Guarantee the safety and stability of charging;
- Improvement of the efficiency and charging quality;
- Personnel and equipment security;

## 2.- TECHNICAL PARAMETERS

Parameter	Value		
Power supply	9-30VDC, Power 3W		
DC voltage range	100V~1000V		
DC voltage measurement accuracy	100-200Vdc: $\leq 2V$		
	200-1000Vdc: $\leq 0.5\%$		
Insulation resistance measurement range	1K $\Omega$ ~10 M $\Omega$ (DC system voltage:100V~1000V)		
Insulation monitoring accuracy @DC system voltage:100V-1000V)	<b>C<sub>Y</sub> range</b>	<b>Resistance range</b>	<b>Accuracy</b>
	0~0.8 $\mu$ F	$\leq 60k\Omega$	$\leq 3k\Omega$
		$60k\Omega < R \leq 1M\Omega$	$\leq 5\%$
	0.8 $\mu$ F ~3 $\mu$ F	$\leq 60k\Omega$	$\leq 6k\Omega$
		$60k\Omega < R \leq 1M\Omega$	$\leq 20\%$
Off-line withstand test	$< 2mA$		
Maximum relay switching current /voltage	4A@400Vac/ 600Vdc		
Relay contact resistance	$< 100m\Omega$		
Relay insulation resistance	1000M $\Omega$		
Standard	IEC 61851-23 (2014-03):2014-11		
Storage environment	Temp: - 55°C ~90°C, Humidity: $\leq 90\%RH$ , Altitude: $\leq 3500m$		
Operating environment	Temp: - 40°C ~75°C, Humidity: $\leq 90\%RH$ , Altitude: $\leq 3500m$		

Notes:

1.When facing the ground insulation resistance  $R_{ISO+}$  and negative insulation resistance to ground  $R_{ISO-}$ , The difference is too large, Multiplier of difference  $> 5$  times,  $R_{ISO+}$  and  $R_{ISO-}$  Large resistors may not be typical values.

2.C<sub>Y</sub> Refers to the positive and negative Y capacitance values of the system bus to ground respectively.

## High voltage test

Voltage test point	Maximum voltage rating	Time
DC+/DC- to GND	4200VDC/3000VAC	≤1min
Power supply +/- to GND	3500VDC/2500VAC	≤1min
RS485 A/B to GND	3500VDC/2500VAC	≤1min
DC+/DC- to power supply +/-	4200VDC/3000VAC	≤1min
DC+/DC- to A/B	4200VDC/3000VAC	≤1min

Note:

The power supply (+/-), RS485(A/B), and Ground(G) should be isolated from each other.

### 3.- FUNCTION INTRODUCTION

#### 3.1.- Working mode introduction

The insulation monitoring module can be in "working" mode or "stop working" mode, when device powered on, device default in working mode, the LED light "PWR" and "L1" ON.

<b>"Working" mode</b>	Insulation resistance monitoring is enabled, alarm function ON, L1 light is on.
<b>"Stop working" mode</b>	Insulation resistance monitoring is disabled, alarm function OFF, L1 light is off

**Notes:** Whether in "working" mode or "Stop working" mode, the DC voltage can also be detected.

#### **Two methods to disable the insulation monitoring function:**

- 1.- Short circuit terminal "R" and "S", the short circuit must be electrically isolated, by using push button or relay closed.
- 2.- Set bit 5 of register 02H to 1.



### 3.2.- Reading insulation resistance

Users can read insulation resistance values as quickly as 0.7s to 2.5s after enabling the insulation monitoring function. For DC to ground capacitance, the module can adaptively monitor ground capacitance below 3 $\mu$ F (positive and negative ground capacitances below 3 $\mu$ F, total capacitance below 6 $\mu$ F). Monitoring time for ground capacitance is no longer than 2.5s.

DC to ground insulation resistance value is only valid if it meets the conditions listed in the table below. The resistance value can be read via communication. If the resistance value is >10M $\Omega$ , 0xEA60 (60000) is displayed; if the resistance value is invalid, 0xFFFF (65535) is displayed.


#### Resistance value validity check condition:

Measured value	Valid or not	Conition	Readable
DC to ground insulation resistance	Valid	<b>Need to meet both:</b> 1. Bit 5 of register 02H is 0; 2. Turn on module exceed 0.7s~2.5s 3. DC voltage $\geq$ 100V;	Positive to ground resistance $R_{fp}$ Positive to ground resistance $R_{fn}$ Bit 5 of register 02H is 0
	Invalid	<b>Meet any of the following:</b> 1. Bit 5 of register 02H is 1; 2. Turn on module less than 0.7s~2.5s 3. DC voltage <100V;	Resistance value is 0xFFFF Bit 5 of register 02H is 1

### 3.3.- Insulation resistance alarm and reset function

#### 3.3.1.- Dip switch description

Insulation resistance alarm threshold and reset mode can be set by the DIP switch. The direction marked with "ON" represents: 1, and reverse direction marked with number represents: 0.


	Function	Description
	<b>1-4:</b> Setting alarm threshold	Using binary encoding: 0000~1111, that is 0~15
	<b>5:</b> Setting alarm multiplier	<b>0:</b> Alarm threshold high byte x10 <b>1:</b> Alarm threshold high byte x100
	<b>6:</b> Setting reset mode	<b>0:</b> Auto reset <b>1:</b> Manual reset

For example: alarm threshold is 15 and the multiplier is 10, means the set alarm value is 150KΩ.


#### Note:

When DIP switches 1 - 4 are set to '0', it means using internal alarm value, which can only be configured via RS485 communication, with a factory default of 0kΩ. The value set through communication is stored in flash memory and will not be erased after power-off.


#### Example:

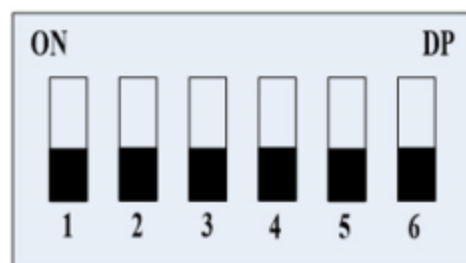


Alarm resistance value is  
communication setting value

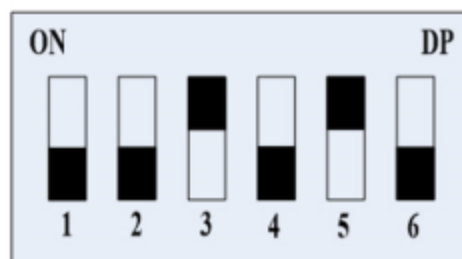

Alarm resistance threshold is 200KΩ

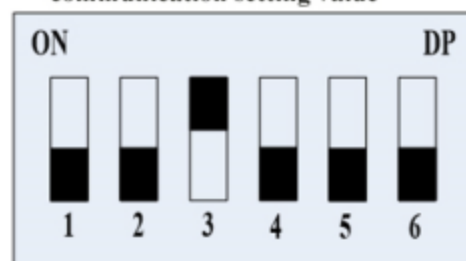

Alarm resistance threshold is 20KΩ

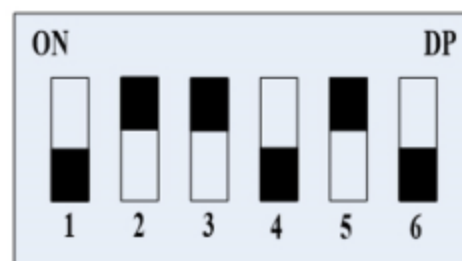

Alarm resistance threshold is 600KΩ

### 3.3.2.- Auto reset/ Manual reset description

**Auto reset:** When fault disappears, relay and 'L2' light automatically reset.

**Manual reset:** User must stop insulation monitoring to reset the fault relay and indicator light 'L2'.

#### Two methods to disable the insulation monitoring function:

- 1.- Short circuit terminal "R" and "S", the short circuit must be electrically isolated, by using push button or relay closed.
- 2.- Set bit 5 of register 02H to 1.

### 3.3.3.- Alarm relay description

Terminal "C" is the common contact, terminal "NO" is the Normally open contact, and terminal "NC" is the Normally close contact. When an insulation resistance alarm occurs, the NO contact closes and the NC contact opens.

### 3.4.- Buzzer function description (optional)


When the insulation monitoring module is in "working" mode, when the monitored insulation resistance value is lower than the alarm value, the module alarms and the buzzer works.

## 4.- INSTALLATION AND STAR UP

### 4.1.- Mounting


JY1000-AL module can be installed by rail or screw. Guide rails use standard width of 35mm. Overall dimensions are shown below: (Unit: mm)

**Dimensions: L\*W\*H (mm) 98\*49\*62**

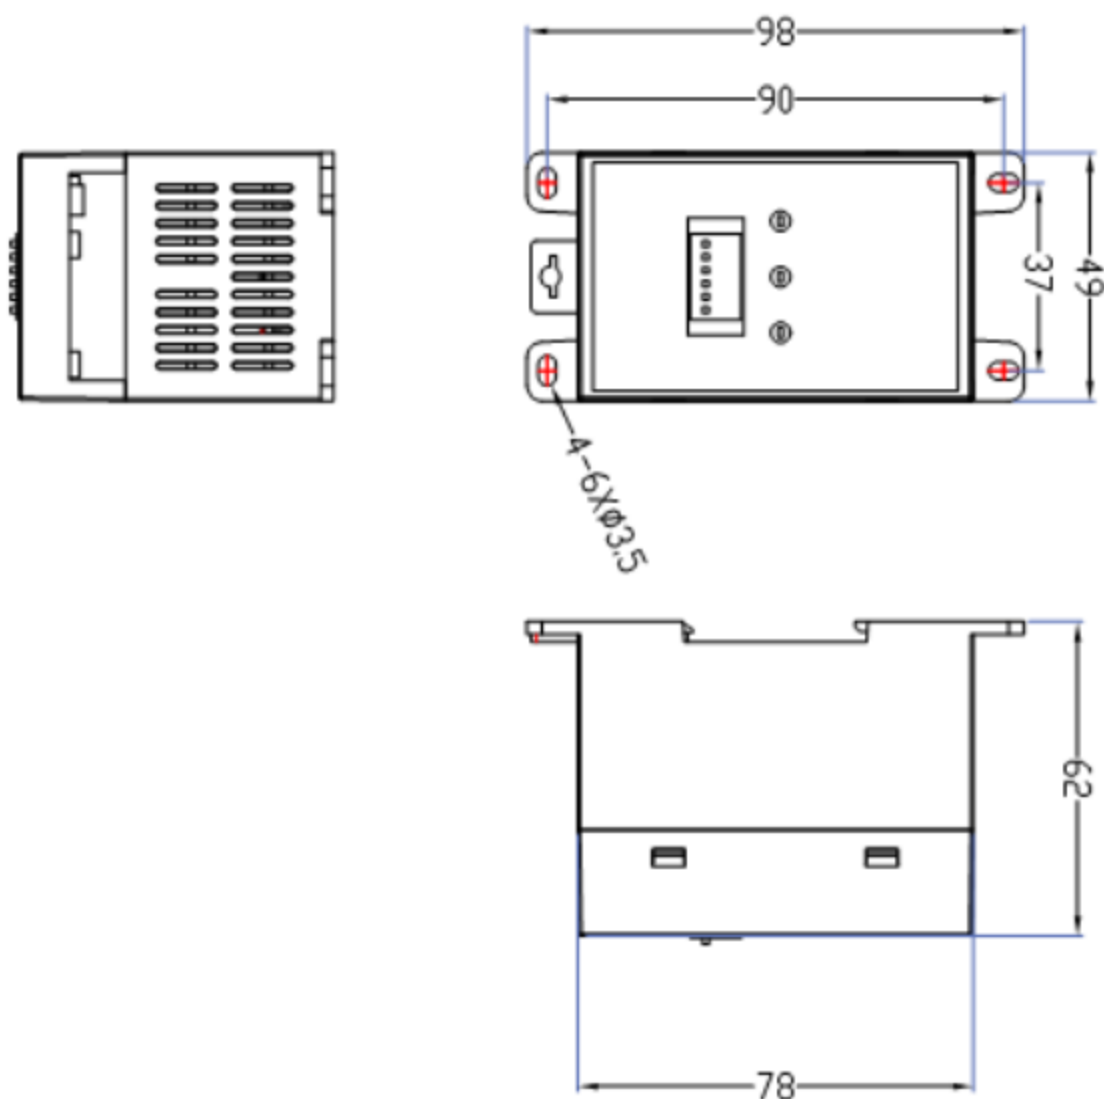

## 4.2.- Wiring Method


The system wiring diagram is shown below. Remote reset is implemented using a switching device, with a short-circuit current of 0.25 mA in the R → S direction.

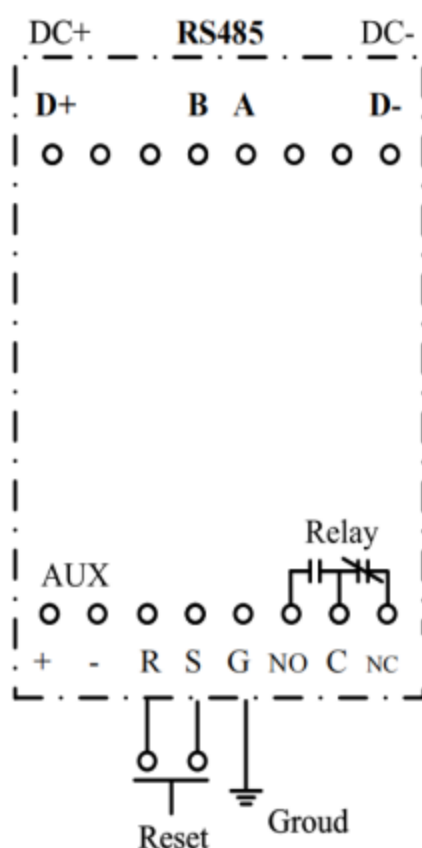

Interface	Connection mode	Definition
D+	Positive pole of DC	DC current input port
D-	Negative pole of DC	
A	RS485-A	RS485 communication port
B	RS485-B	
+	Positive pole of power supply	9-30VDC
-	Negative pole of power supply	
GND	Grounding point	
C	Relay common point	When insulation resistance alarm occurs  NO contact is closed NC contact is disconnected.
NO	NO contact	
NC	NC contact	

### 4.3.- The LED indicator introduction

After the module is powered on, the PWR indicator is on.

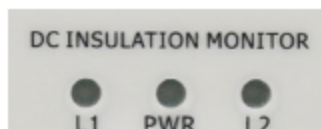

**PWR "ON"** The device is powered on.

#### **"Working" mode**

**L1 "ON"** Insulation resistance is continuously monitoring, the alarm function is activated, and the relay is closed.

#### **"Stop working" mode**

**L1 "OFF"** Insulation resistance is not monitored, the alarm function is stopped, and the relay is disconnected.

**L2 "ON"** When the monitored insulation resistance value is lower than the alarm value, the module alarms. the coil of the fault relay is closed, the corresponding normally open dry contact is closed the normally closed dry contact is disconnected.

## 5.- COMMUNICATION INTERFACE

### 5.1.- Connection for RS485 and communication protocol

Users can send and receive data frames through the RS485 communication port. The circuit is equipped with a 510Ω terminal resistor, terminals A and B correspond to RS485 outputs A and B respectively.

JY1000-AL adopt custom protocol, initial address: 10, initial baud rate: 9600bps, parity: none, stop bit 1, data bit 8.

#### Modbus functions

Code	Description
01	Read data from the slave registers
02	Write data to the slave register

#### Read frame format

Address code	1 BYTE	Slave device address, initial 10
Function code	1 BYTE	Indicates the function codes like read coils / inputs
Register data	4 BYTE	Register address
Error Check code	2 BYTE	Cyclical Redundancy Check (CRC )

**Note:** Only can send one fixed command to read data: 10 01 02 03 04 05 0C 30

#### Write frame format

Address code	1 BYTE	Slave device address, initial 10
Function code	1 BYTE	Indicates the function codes like read coils / inputs
No data	1 BYTE	This byte is not used; normally write 00H
Register data	1 BYTE	Register address
Write data	2 BYTE	Write data high byte Write data low byte
Error Check code	2 BYTE	Cyclical Redundancy Check (CRC )

## 5.2.- Register map

Register	Data	Range	Byte format	Read/Write
<b>02</b>	Communication address; Work status control; Query data; Query fault status;	0~65535	int	R/W
<b>03</b>	DC voltage	0~1023 V	int	R
<b>04</b>	Positive grounding resistance	0~FFFF kΩ	int	R
<b>05</b>	Negative grounding resistance	0~FFFF kΩ	int	R
<b>07</b>	Internal alarm resistance threshold	0~10000 kΩ	int	W

Notes:

Only when the DC voltage is between 100V~1000V, Insulation resistance monitoring can be realized. If DC voltage is low than 100V, or it is turned on within a short time, the insulation resistance read is 0xFFFF (means invalid number).

If the read insulation resistance value is a valid number, the insulation resistance value monitoring range is between 1KΩ~10MΩ. When the measured value is greater than 10MΩ, the value received by the communication is 0xEA60 (means infinity).



### 5.2.1.- Detailed definition

02H Read/Write	
Bit15~Bit8 (R/W)	Communication address
Bit7~Bit6	Null
Bit5(W)	<b>Work status control</b>  <b>0:</b> Start working mode (Insulation resistance monitoring is enabled, alarm function ON, and L1 light is on.)  <b>1:</b> Stop working mode (Insulation resistance monitoring is disabled, alarm function OFF, and L1 light is off.)
Bit4(R)	Null
Bit3(R)	<b>Negative pole to ground insulation alarm status</b>  <b>0:</b> Negative to ground insulation alarm (negative grounding resistance < set threshold)  <b>1:</b> No alarm
Bit2(R)	<b>Positive pole to ground insulation alarm status</b>  <b>0:</b> Positive to ground insulation alarm (positive grounding resistance < set threshold value)  <b>1:</b> No alarm
Bit1(R)	Null
Bit0(R)	Null
03H Read	
Bit15~Bit0	DC voltage value: 10V~1000V
04H Read	
Bit15~Bit0	Positive grounding resistance. The range is 1kΩ~10MΩ.  If the read data is 0XEA60 (60000), it means that the positive grounding resistance is infinite. If it is greater than 10MΩ, it will display 60000.
05H Read	
Bit15~Bit0	Negative grounding resistance. The range is 1kΩ~10MΩ.  If the read data is 0XEA60 (60000), it means that the negative grounding resistance is infinite. If it is greater than 10MΩ, it will display 60000.
07H Write	
Bit15~Bit0	Set the internal alarm resistance threshold. Range 0Ω~10000kΩ

### 5.3.- Command examples

#### 5.3.1.- Read Command (Fun 01)

##### Sample 1 Read register 02 03 04 05 data

Host inquiry:

10 01 02 03 04 05 0C 30

Slave response:

10 04 01 C4 00 31 EA 60 EA 40

##### Definition:

02H Data=0X1004, Mean: the communication address is 10H, and there is a fault between the positive pole and the ground.

03H Data=0X01C4=452, Mean: the DC voltage is 452V.

04H Data=0X0031=49, Mean: the positive grounding resistance is 49KΩ

05H Data=0XEA60=60000, Mean: the resistance of the negative grounding resistance is infinite

#### 5.3.2.- Write Command (Fun 02)

##### Sample 1 Turn on "Work" mode

Host inquiry:

10 02 00 02 10 00 D7 4B

NO slave response

##### Sample 2 Turn on "Stop work" mode

Host inquiry:

10 02 00 02 10 20 D6 93

NO slave response

##### Sample 3 Set the internal alarm threshold to 100KΩ

Host inquiry:

10 02 00 07 00 64 CB 61

NO slave response

## 6.- SAFETY CONSIDERATIONS



All installation specification described at the previous chapters named:  
**INSTALLATION AND STARTUP, INSTALLATION MODES and SPECIFICATIONS.**

Please note that with the instrument powered on, the terminals could be dangerous to touching and cover opening actions or elements removal may allow accessing dangerous parts. This instrument is factory-shipped at proper operation condition.

- ◆ The device must have a professional installation and maintenance
- ◆ Any operation of the device, you must cut off the input signal and power;

## 7.- MAINTENANCE

The JY1000-AL does not require any special maintenance. No adjustment, maintenance or repairing action should be done when the instrument is open and powered on, should those actions are essential, high-qualified operators must perform them.

Before any adjustment, replacement, maintenance or repairing operation is carried out, the instrument must be disconnected from any power supply source.

When any protection failure is suspected to exist, the instrument must be immediately put out of service. The instrument's design allows a quick replacement in case of any failure.

For any inquiry about the instrument performance or any failure,  
contact to Blue Jay's technical service.

*Blue Jay - After-sales service*

E-mail: [tech@cqbluejay.com](mailto:tech@cqbluejay.com)