

ECONOMIC INDICATOR

195PM-VA

DESCRIPTION

195PM series Indicator has been designed in simple function and 4 digital 20.0mm LED displays with economic cost.

They are also can be programmed by tack switches that are hidden in backside of front bezel.

FEATURE


- Measuring AC / DC Voltage 0~600V / Current 0~10A
- Optional output available for one of 2 relay, analogue or RS485
- CE Approved & RoHS

APPLICATIONS

- Testing Equipments for Volt/Current Measuring,
- MCC panel, Machinery, Switch gear... for Voltage or Current Measuring



ORDERING INFORMATION

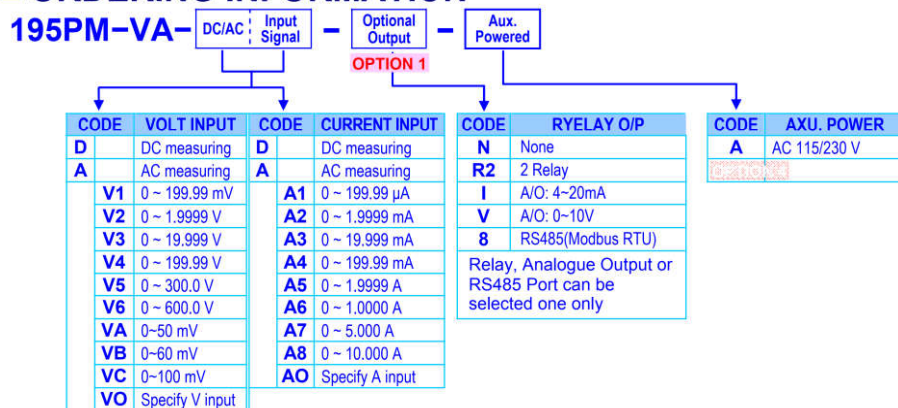

TECHNICAL SPECIFICATION

Input Range		Measuring Range		Input Impedance	
Measuring Range DC / AC	Input Impedance	DC / AC	DC / AC	DC / AC	Input Impedance
Voltage	0~50/~100	≥5M ohm	Current	0~199.99μA	1K ohm
	0~199.99 mV	≥5M ohm		0~1.9999 mA	100 ohm
	0~1.9999 V	≥1M ohm		0~19.999 mA	10 ohm
	0~19.999 V	≥1M ohm		0~199.99 mA	1 ohm
	0~199.99 V	≥1M ohm		0~1.9999 A	0.05 ohm
	0~300.0 V	≥2M ohm		0~5.000 A	0.02 ohm
0~600.0 V	≥2M ohm	0~10.000 A	0.01 ohm		

Calibration: Digital calibration by front key
A/D converter: 12 bits resolution
Accuracy: DC: ≤± 0.1% of FS ± 1C
 AC: ≤± 0.2% of FS ± 1C
Sampling rate: 15 cycles/sec
Response time: ≤ 100 msec.(when the AvG = "1") in standard

Display & Functions
LED: Numeric: 4 digits, 0.8"(20.0mm) red high-brightness LED
Display range: -1999~+9999
Scaling function: L α5C : Low Scale; Settable range: -1999~+9999
 H α5C : High Scale; Settable range: -1999~+9999
Decimal point: Programmable from 0 / 00 / 000 / 0000
Over range Indication: ααFL, when input is over 110% of input range Hi
Under range indication: -ααFL, when input is under -0% of input range Lo
Max / Mini recording: Maximum and Minimum value storage during power on.
Low cut: L αCUE : Settable range: -1999~9999 counts

Reading Stable Function
Average: R αG Settable range: 1~99 times
Moving average: R αG Settable range: 1(None)~99 times
Digital filter: dF αLE Settable range: 0(None)/1~99 times

Control Functions(option)

Set-points: Two set-point
Control relay: 2 Relay, FORM-C, 5A/230Vac, 10A/115V
Relay energized mode: Energized levels compare with set-points:
 Hi / Lo / Hi.HLd / Lo.HLd programmable
Energizing functions: Start delay / Energized & De-energized delay / Hysteresis
 Energized Latch
Start band:(Minimum level for Energizing): 0~9999counts
Start delay time: 0:00.0~9(Minutes):59.9(Second)
Energized delay time: 0:00.0~9(Minutes):59.9(Second)
De-energized delay time: 0:00.0~9(Minutes):59.9(Second)
 Hysteresis: 0~5000 counts

Analogue output(option)

Accuracy: ≤± 0.2% of F.S.
Ripple: ≤± 0.1% of F.S.
Response time: ≤100 msec. (10~90% of input)
Isolation: AC 2.0 KV between input and output
Output range: Specify either Voltage or Current output in ordering
Voltage: 0~5V / 0~10V / 1~5V programmable
Current: 0~10mA / 0~20mA / 4~20mA programmable
Voltage: 0~10V; ≥ 1000Ω;
Current: 4(0)~20mA; ≤ 600Ω max
Functions:
 R αH5 (output range high): Settable range: -1999~9999
 R αL5 (output range Low): Settable range: -1999~9999
Digital fine adjust:
 R αP α : Settable range: -38011~+27524
 R αS P α : Settable range: -38011~+27524

RS 485 Communication(option)

Protocol: Modbus RTU mode
Baud rate: 1200/2400/4800/9600/19200/38400 programmable
Data bits: 8 bits
Parity: Even, odd or none (with 1 or 2 stop bit) programmable
Address: 1 ~ 255 programmable
Distance: 1200M
Terminate resistor: 150Ω at last unit.

Electrical Safety

Dielectric strength: AC 2.0 KV for 1 min, Between Power / Input / Output / Case
Insulation resistance: ≥100M ohm at 500Vdc, Between Power / Input / Output
Isolation: Between Power / Input / Relay, Analogue or RS485
EMC: EN 55011:2002; EN 61326:2003
Safety(LVD): EN 61010-1:2001


Environmental

Operating temp.: 0~60 °C
Operating humidity: 20~95 %RH, Non-condensing
Temp. coefficient: ≤100 PPM/°C
Storage temp.: -10~70 °C
Enclosure: Front panel: IEC 549 (IP54); Housing: IP20

Mechanical


Dimensions: 96mm(W) x 48mm(H) x 72mm(D)
Panel cutout: 92mm(W) x 44mm(H)
Case materiel: ABS fire-resistance (UL 94V-0)
Mounting: Panel flush mounting
Terminal block: Plastic NYLON 66 (UL 94V-0)
 20A/600Vac, M3.5, 12~22AWG
Weight: 350g

■ DIMENSIONS

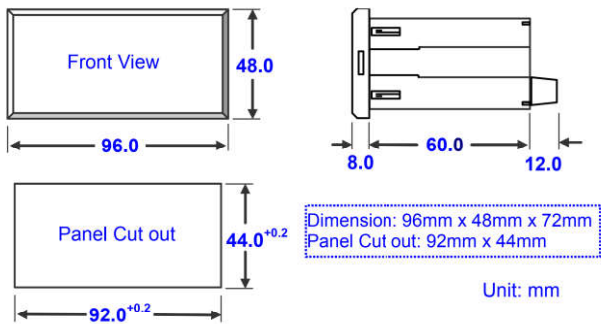

■ INSTALLATION

The meter should be installed in a location that dose not exceed the maximum operating temperature and provides good air circulation.

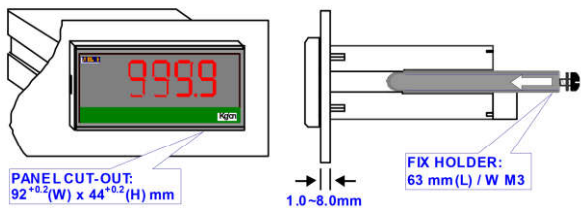

■ CONNECTION DIAGRAM


Terminal blocks:
 20A/600Vac, M3.5, 1.2~3.5mm² (22~12AWG)




Power and Input

Please check the voltage of power supplied first, and then connect to the specified terminals. It is recommended that power supplied to the meter be protected by a fuse or circuit breaker.

Power Supply

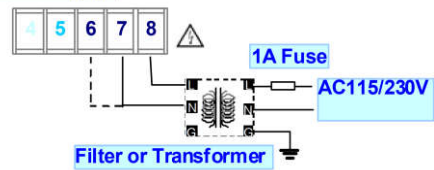

CM1-VA Input connection

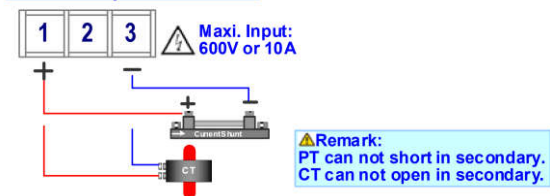


Output (one output available of Relay, Analogue or RS485)


Relay output



Analogue output

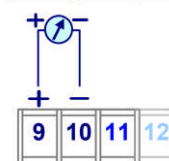


RS485 port

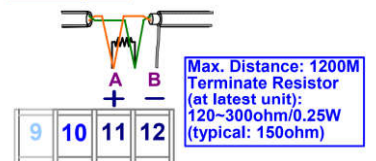

■ FUNCTION DESCRIPTION

Scaling function:

Setting the [LoSC] (Low scale) and [H .SC] (High scale) in [INPUT GROUP] to relative input signal. **Reverse scaling will be done too.** Please refer to the figure as below,

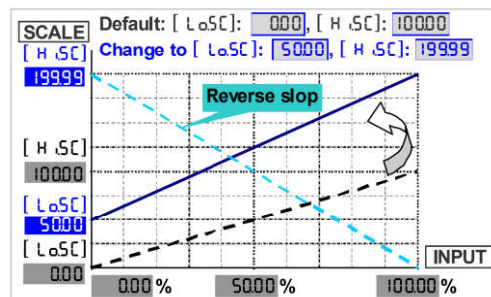

*Too narrow scale may course display lower resolution.


■ OPERATING KEY

*Please access to the Programming Level to check and set the parameters when users start to run the meter

- **Operating Key:** 4 keys for Enter(Function) / Shift(Escape) / Up key / Down key
- The meter has designed operation similar as PC's and . In any page, press key means "enter" or "confirm setting", and press key means "escape()" or "shift".
- In Programming Level, the screen will return to Measuring Page after do not press any key over 2 minutes, or press for 1 second.

	Function Index	Setting Status
(=) Enter/Fun key	(1) In any page, press to access the level or function index (2) From the function index to access setting status	(3) Setting Confirmed, save to EEPROM and go to next function index
(=) Shift key	(1) In measuring page, press for 1 second to access user level. (2) In function index, press for 1 second to go back upper level. (3) In function group index, press for 1 second to go back measuring page	(4) In setting status, press to Shift the setting position. (5) In setting status, press for 1 second to abort setting and go back this function index.
(=) Up key	(1) In function index, press to go back to previous function index	(2) In setting status for function, press to select function (3) During number Setting, press can roll the digit up
(=) Down key	(1) In Function Index Page, press will go to the next Function Index Page.	(2) In setting status for function, press to select function (3) During number Setting, press can roll the digit down.

■ FRONT PANEL

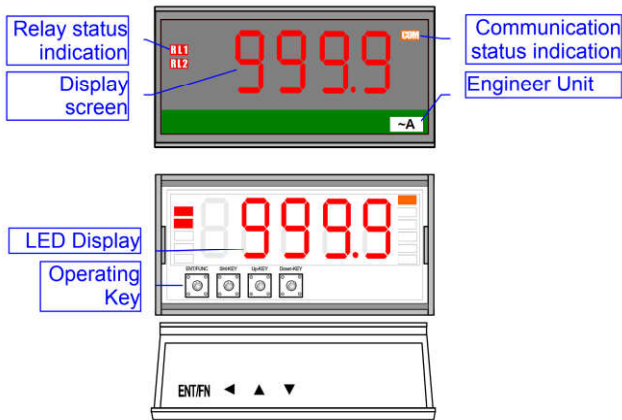

■ Stickers:

Each meter has a sticker for engineer units.

~μA	~mA	~A	~KA	=μA	=mA	=A	=KA		
~μV	~mV	~V	~KV	=μV	=mV	=V	=KV		
A hr	A min	A sec	A rms	V rms	A/mA	W/A	Var/A		
W	KW	MW	WH	KWH	MWH	W/WH	W/Var		
Var	KVar	MVar	QH	KQH	MQH	COS ^θ	Var/VarH		
VA	KVA	MVA	VAH	KVAH	MVAH	θ	KVarH		
Hz	PF	KA	KV	KHz	MVarH	KM/hr			
A	mA	V	mV	Ω	KΩ	°C	°F	%RH	
RPM	M/min	Y/min	F/min	M/sec	%	°	MΩ		
Kg/cm ²	Bar	mmH ₂ O	mmHg	KPA	mmAq	PSI	mBar	PA	
M ³ /min	ml/min	Ton/D	L/min	Torr	M ³ /hr	Kg-cm	cmHg		
mm	cm	M	KM	ft	Yard	ppm	ppb		
g	KG	Ton	T-cm	NT-cm	PH	MPM	L		

- **Operating Key:** 4 keys for Enter(Function) / Shift(Escape) / Up key / Down key

- **Pass Word:** Settable range:0000~9999;

User has to key in the right pass word so that get into [Programming level]. Otherwise, the meter will go back to measuring page. If user forgets the password, please contact with the service window.

■ Number screen

0.8"(20.0mm) red high-brightness LED for 5 digital present value.

■ I/O Status Indication

- **Relay Energized:** 2 square red LED
RL1 display when Relay 1 energized;
RL2 display when Relay 2 energized;
- **RS485 Communication:** 1 square LED
COM will flash when the meter is receive or send data, and **COM** flash quickly means the data transient quicker.

OPERATING DIAGRAM (The detail description of operation, please refer to operating manual.)

